TOS6210

Ground Bond Tester

Ground Bond tester supporting standard compliance tests up to 60A





TOS6210




Test up to 60A is possible!

While inheriting the basic performance and functions of its predecessor (TOS6200), such as a constant current driving system that provides current waveforms with little skew and high measurement accuracy, the TOS6210 tester extends the maximum test current from 30 A to 60 A, which is demanded by the new standard. In addition, the tester also lets you judge the acceptability of the device under test based on the drop in voltage, as required in the standard. What's more, you can preset test conditions of up to 20 different types of safety standards, such as those for information technology equipment, home appliances, medical devices, and measuring instruments, in the memory on the main unit's panel.

A simple memory call operation allows you to set up a protective earth or protective bonding continuity test as stipulated in UL60950-1 and other relevant specifications including IEC and JIS standards. The tester also features a set of functions that meet the specific needs of testing personnel, such as an offset cancellation function and a memo function that allows you to input calibration dates, production numbers, and other test-related information and read the input information later via the GPIB or RS-232C interface.

- Test current value: 6 to 60 A AC / Resistance value: 0.001 to 0.600Ω
- Voltage drop-based judgment function
- Offset cancelling function
- Stores 100 test conditions in memory
- Incorporates test conditions into program
- Contact check function
- Equipped with standard GPIB and RS-232C interfaces
- Equipped with standard test lead (TL12-TOS)

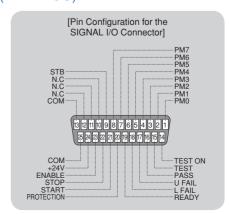

TOS6210

Ground Bond Tester

Output block			
Current setting range (*1)	6.0 to 62.0 A AC		
current setting range (1)	(With respect to resistance resulting in output power of the maximum rated Output or less and an output terminal voltage of 5.4 V or less)		
Resolution	(Will respect to resistance resulting in output power of the maximum raced Output or less and an output terminal voltage of 3.4 v or less)		
Accuracy	$\pm (1\% \text{ of setting} + 0.4\text{A})$		
Maximum rated output	220 VA (at the output terminals)		
Distortion factor	2% or less (with respect to 0.1Ω pure resistance load of 20 A or greater)		
Frequency	50/60 Hz, sine wave (selectable)		
Accuracy	±200ppm		
Open terminal voltage	6 Vrms or less		
Output method	PWM switching method		
Output method Output ammeter	F win switching method		
	1004 (604 46		
Measurement range Resolution	0.0 to 66.0 A AC 0.1A		
Accuracy	± (1% of reading + 0.4A)		
Response	Mean value response/rms value display (response time: 200 ms)		
Holding function	The current measured at the end of test is held during the PASS or FAIL inteval		
Output voltmeter	lan contra		
Measurement range	0.00 to 6.00 V AC		
Resolution	0.01V		
Offset cancel function	0.00 to 5.40 V (Offset ON/OFF function provided)		
Accuracy	± (1% of reading + 0.02V)		
Response	Mean value response/rms value display (response time: 200 ms)		
Holding function	The voltage measured at the end of test is held during the PASS or FAIL inteval		
Ohmmeter (*2)			
Measurement range	$0.001 \text{ to } 0.600 \Omega$		
Resolution	0.001Ω		
Offset cancel function	0.000 to 0.600 Ω (Offset ON/OFF function provided)		
Accuracy	$\pm (2\% \text{ of reading} + 0.003 \Omega)$		
Holding function	The resistance measured at the end of test is held during the PASS or FAIL interval		
Pass/fail judgement function (*3)			
Resistance value-based judgement	Window comparator system		
	•If a resistance value equal to or greater than the upper reference value is detected, a FAIL determination is returned.		
	•If a resistance value equal to or less than the lower reference value is detected, a FAIL determination is returned.		
	•If a resistance value has been judged as FAIL, the tester shuts off the output and generates a FAIL signal.		
	•If the set time elapses without abnormalities, the tester shuts off the output and generates a PASS signal.		
Setting range for the upper reference			
value (UPPER)	5 0001 to 5000 12		
Setting range for the lower reference	ce 0.001 to 0.600 Ω		
value (LOWER)	5100110 5100012		
Resolution	0.001 Ω		
Judgement accuracy	$\pm (2\% \text{ of UPPER} + 0.003 \Omega)$		
Sampled voltage value-based judgeme			
Sampled voltage value-based judgetile			
	•If a voltage value equal to or greater than the upper reference value is detected, a FAIL determination is returned.		
	•If a voltage value equal to or less than the lower reference value is detected, a FAIL determination is returned.		
	•If a voltage value equal to or less than the lower reference value is detected, a FAIL determination is returned. •If a voltage value has been judged as FAIL, the tester shuts off the output and generates a FAIL signal.		
Continuo anno Conti	 •If a voltage value equal to or less than the lower reference value is detected, a FAIL determination is returned. •If a voltage value has been judged as FAIL, the tester shuts off the output and generates a FAIL signal. •If the set time elapses without abnormalities, the tester shuts off the output and generates a PASS signal. 		
Setting range for the upper reference	 •If a voltage value equal to or less than the lower reference value is detected, a FAIL determination is returned. •If a voltage value has been judged as FAIL, the tester shuts off the output and generates a FAIL signal. •If the set time elapses without abnormalities, the tester shuts off the output and generates a PASS signal. 		
value (UPPER)(*4)	•If a voltage value equal to or less than the lower reference value is detected, a FAIL determination is returned. •If a voltage value has been judged as FAIL, the tester shuts off the output and generates a FAIL signal. •If the set time elapses without abnormalities, the tester shuts off the output and generates a PASS signal. •If the set time elapses without abnormalities, the tester shuts off the output and generates a PASS signal.		
value (UPPER)(*4) Setting range for the lower reference	•If a voltage value equal to or less than the lower reference value is detected, a FAIL determination is returned. •If a voltage value has been judged as FAIL, the tester shuts off the output and generates a FAIL signal. •If the set time elapses without abnormalities, the tester shuts off the output and generates a PASS signal. •If the set time elapses without abnormalities, the tester shuts off the output and generates a PASS signal.		
value (UPPER)(*4) Setting range for the lower reference value (LOWER)	•If a voltage value equal to or less than the lower reference value is detected, a FAIL determination is returned. •If a voltage value has been judged as FAIL, the tester shuts off the output and generates a FAIL signal. •If the set time elapses without abnormalities, the tester shuts off the output and generates a PASS signal. 0.01 to 5.40 V ce 0.01 to 5.40 V		
value (UPPER)(*4) Setting range for the lower reference	•If a voltage value equal to or less than the lower reference value is detected, a FAIL determination is returned. •If a voltage value has been judged as FAIL, the tester shuts off the output and generates a FAIL signal. •If the set time elapses without abnormalities, the tester shuts off the output and generates a PASS signal. •If the set time elapses without abnormalities, the tester shuts off the output and generates a PASS signal. •If the set time elapses without abnormalities, the tester shuts off the output and generates a PASS signal. •If the set time elapses without abnormalities, the tester shuts off the output and generates a PASS signal. •If the set time elapses without abnormalities, the tester shuts off the output and generates a PASS signal. •If the set time elapses without abnormalities, the tester shuts off the output and generates a PASS signal.		
value (UPPER)(*4) Setting range for the lower reference value (LOWER) Resolution Judgement accuracy	•If a voltage value equal to or less than the lower reference value is detected, a FAIL determination is returned. •If a voltage value has been judged as FAIL, the tester shuts off the output and generates a FAIL signal. •If the set time elapses without abnormalities, the tester shuts off the output and generates a PASS signal. 0.01 to 5.40 V 0.01 to 5.40 V 0.01 V ± (2% of UPPER + 0.05 V)		
value (UPPER)(*4) Setting range for the lower reference value (LOWER) Resolution Judgement accuracy	•If a voltage value equal to or less than the lower reference value is detected, a FAIL determination is returned. •If a voltage value has been judged as FAIL, the tester shuts off the output and generates a FAIL signal. •If the set time elapses without abnormalities, the tester shuts off the output and generates a PASS signal. 0.01 to 5.40 V 0.01 to 5.40 V 0.01 V ± (2% of UPPER + 0.05 V) Calibration is performed with the rms value of the sine wave, using a pure resistance load.		
value (UPPER)(*4) Setting range for the lower reference value (LOWER) Resolution Judgement accuracy Calibration	•If a voltage value equal to or less than the lower reference value is detected, a FAIL determination is returned. •If a voltage value has been judged as FAIL, the tester shuts off the output and generates a FAIL signal. •If the set time elapses without abnormalities, the tester shuts off the output and generates a PASS signal. 0.01 to 5.40 V 0.01 to 5.40 V 0.01 V ± (2% of UPPER + 0.05 V) Calibration is performed with the rms value of the sine wave, using a pure resistance load. Lights for approximately 0.2 sec when the measured value has been judged as PASS.		
value (UPPER)(*4) Setting range for the lower reference value (LOWER) Resolution Judgement accuracy Calibration	•If a voltage value equal to or less than the lower reference value is detected, a FAIL determination is returned. •If a voltage value has been judged as FAIL, the tester shuts off the output and generates a FAIL signal. •If the set time elapses without abnormalities, the tester shuts off the output and generates a PASS signal. 0.01 to 5.40 V 0.01 to 5.40 V 0.01 V ± (2% of UPPER + 0.05 V) Calibration is performed with the rms value of the sine wave, using a pure resistance load.		
value (UPPER)(*4) Setting range for the lower reference value (LOWER) Resolution Judgement accuracy Calibration	•If a voltage value equal to or less than the lower reference value is detected, a FAIL determination is returned. •If a voltage value has been judged as FAIL, the tester shuts off the output and generates a FAIL signal. •If the set time elapses without abnormalities, the tester shuts off the output and generates a PASS signal. 0.01 to 5.40 V 0.01 to 5.40 V 0.01 V ± (2% of UPPER + 0.05 V) Calibration is performed with the rms value of the sine wave, using a pure resistance load. Lights for approximately 0.2 sec when the measured value has been judged as PASS.		
value (UPPER)(*4) Setting range for the lower reference value (LOWER) Resolution Judgement accuracy Calibration LED PASS	•If a voltage value equal to or less than the lower reference value is detected, a FAIL determination is returned. •If a voltage value has been judged as FAIL, the tester shuts off the output and generates a FAIL signal. •If the set time elapses without abnormalities, the tester shuts off the output and generates a PASS signal. 0.01 to 5.40 V •• 0.01 to 5.40 V •• 0.01 to 5.40 V Calibration is performed with the rms value of the sine wave, using a pure resistance load. Lights for approximately 0.2 sec when the measured value has been judged as PASS. It is lit continuously when the PASS holding time is set to HOLD.		
value (UPPER)(*4) Setting range for the lower reference value (LOWER) Resolution Judgement accuracy Calibration LED PASS UPPER FAIL	•If a voltage value equal to or less than the lower reference value is detected, a FAIL determination is returned. •If a voltage value has been judged as FAIL, the tester shuts off the output and generates a FAIL signal. •If the set time elapses without abnormalities, the tester shuts off the output and generates a PASS signal. 0.01 to 5.40 V • 0.01 to 5.40 V • 0.01 V ± (2% of UPPER + 0.05 V) Calibration is performed with the rms value of the sine wave, using a pure resistance load. Lights for approximately 0.2 sec when the measured value has been judged as PASS. It is lit continuously when the PASS holding time is set to HOLD. Lights if a resistance or voltage value equal to or greater than the upper reference value is detected and judged FAIL. Lights if a resistance or voltage value equal to or greater than the upper reference value is detected and judged FAIL.		
value (UPPER)(*4) Setting range for the lower reference value (LOWER) Resolution Judgement accuracy Calibration LED PASS UPPER FAIL LOWER FAIL	•If a voltage value equal to or less than the lower reference value is detected, a FAIL determination is returned. •If a voltage value has been judged as FAIL, the tester shuts off the output and generates a FAIL signal. •If the set time elapses without abnormalities, the tester shuts off the output and generates a PASS signal. 0.01 to 5.40 V ce 0.01 to 5.40 V 0.01 V ± (2% of UPPER + 0.05 V) Calibration is performed with the rms value of the sine wave, using a pure resistance load. Lights for approximately 0.2 sec when the measured value has been judged as PASS. It is lit continuously when the PASS holding time is set to HOLD. Lights if a resistance or voltage value equal to or greater than the upper reference value is detected and judged FAIL. Lights if a resistance or voltage value equal to or greater than the upper reference value is detected and judged FAIL. •The buzzer sounds for the pass holding time has been set if the measured value has been judged as PASS.		
value (UPPER)(*4) Setting range for the lower reference value (LOWER) Resolution Judgement accuracy Calibration LED PASS UPPER FAIL LOWER FAIL	•If a voltage value equal to or less than the lower reference value is detected, a FAIL determination is returned. •If a voltage value has been judged as FAIL, the tester shuts off the output and generates a FAIL signal. •If the set time elapses without abnormalities, the tester shuts off the output and generates a PASS signal. 0.01 to 5.40 V ce 0.01 to 5.40 V 0.01 V ± (2% of UPPER + 0.05 V) Calibration is performed with the rms value of the sine wave, using a pure resistance load. Lights for approximately 0.2 sec when the measured value has been judged as PASS. It is lit continuously when the PASS holding time is set to HOLD. Lights if a resistance or voltage value equal to or greater than the upper reference value is detected and judged FAIL. •The buzzer sounds for the pass holding time has been set if the measured value has been judged as PASS. •The buzzer sounds continuously under the following condition:		
value (UPPER)(*4) Setting range for the lower reference value (LOWER) Resolution Judgement accuracy Calibration LED PASS UPPER FAIL LOWER FAIL	•If a voltage value equal to or less than the lower reference value is detected, a FAIL determination is returned. •If a voltage value has been judged as FAIL, the tester shuts off the output and generates a FAIL signal. •If the set time elapses without abnormalities, the tester shuts off the output and generates a PASS signal. 0.01 to 5.40 V ce 0.01 to 5.40 V 0.01 V ± (2% of UPPER + 0.05 V) Calibration is performed with the rms value of the sine wave, using a pure resistance load. Lights for approximately 0.2 sec when the measured value has been judged as PASS. It is lit continuously when the PASS holding time is set to HOLD. Lights if a resistance or voltage value equal to or greater than the upper reference value is detected and judged FAIL. Lights if a resistance or voltage value equal to or greater than the upper reference value is detected and judged FAIL. •The buzzer sounds for the pass holding time has been set if the measured value has been judged as PASS. •The buzzer sounds continuously under the following condition: The measured value has been judged as PASS when the PASS holding time is set to HOLD.		
value (UPPER)(*4) Setting range for the lower reference value (LOWER) Resolution Judgement accuracy Calibration LED PASS UPPER FAIL LOWER FAIL	•If a voltage value equal to or less than the lower reference value is detected, a FAIL determination is returned. •If a voltage value has been judged as FAIL, the tester shuts off the output and generates a FAIL signal. •If the set time elapses without abnormalities, the tester shuts off the output and generates a PASS signal. 0.01 to 5.40 V ce 0.01 to 5.40 V 0.01 V ± (2% of UPPER + 0.05 V) Calibration is performed with the rms value of the sine wave, using a pure resistance load. Lights for approximately 0.2 sec when the measured value has been judged as PASS. It is lit continuously when the PASS holding time is set to HOLD. Lights if a resistance or voltage value equal to or greater than the upper reference value is detected and judged FAIL. •The buzzer sounds for the pass holding time has been set if the measured value has been judged as PASS. •The buzzer sounds continuously under the following condition: The measured value has been judged as PASS when the PASS holding time is set to HOLD. The measured value has been judged as UPPER FAIL.		
value (UPPER)(*4) Setting range for the lower reference value (LOWER) Resolution Judgement accuracy Calibration LED PASS UPPER FAIL LOWER FAIL	•If a voltage value equal to or less than the lower reference value is detected, a FAIL determination is returned. •If a voltage value has been judged as FAIL, the tester shuts off the output and generates a FAIL signal. •If the set time elapses without abnormalities, the tester shuts off the output and generates a PASS signal. 0.01 to 5.40 V • 0.01 to 5.40 V • 0.01 V ± (2% of UPPER + 0.05 V) Calibration is performed with the rms value of the sine wave, using a pure resistance load. Lights for approximately 0.2 sec when the measured value has been judged as PASS. It is lit continuously when the PASS holding time is set to HOLD. Lights if a resistance or voltage value equal to or greater than the upper reference value is detected and judged FAIL. Lights if a resistance or voltage value equal to or greater than the upper reference value is detected and judged FAIL. •The buzzer sounds for the pass holding time has been set if the measured value has been judged as PASS. •The buzzer sounds continuously under the following condition: The measured value has been judged as PASS when the PASS holding time is set to HOLD. The measured value has been judged as UPPER FAIL. The measured value has been judged as LOWER FAIL.		
value (UPPER)(*4) Setting range for the lower reference value (LOWER) Resolution Judgement accuracy Calibration LED PASS UPPER FAIL LOWER FAIL	•If a voltage value equal to or less than the lower reference value is detected, a FAIL determination is returned. •If a voltage value has been judged as FAIL, the tester shuts off the output and generates a FAIL signal. •If the set time elapses without abnormalities, the tester shuts off the output and generates a PASS signal. 0.01 to 5.40 V ce 0.01 to 5.40 V 0.01 V ± (2% of UPPER + 0.05 V) Calibration is performed with the rms value of the sine wave, using a pure resistance load. Lights for approximately 0.2 sec when the measured value has been judged as PASS. It is lit continuously when the PASS holding time is set to HOLD. Lights if a resistance or voltage value equal to or greater than the upper reference value is detected and judged FAIL. •The buzzer sounds for the pass holding time has been set if the measured value has been judged as PASS. •The buzzer sounds continuously under the following condition: The measured value has been judged as PASS when the PASS holding time is set to HOLD. The measured value has been judged as UPPER FAIL.		

*1: Time limitation with respect to output

The heat radiation capacity at the output block of the tester is designed to be onethird of the rated output, accounting for size, weight, cost, and other factors. Always use the tester within the limitation values given below. Use of the tester beyond these limits will cause the temperature of the output block to rise


excessively, potentially tripping the internal protection circuit. In this case, suspend testing for approximately 30 minutes, then press the STOP switch. When temperatures fall to normal levels, the tester will revert to ready status.

Output time limitation						
Ambient temperature t (°C)	Test current I (A)	Pause time	Maximum allowable continuous test time			
	40 < I ≤ 60	Equal to or greater than the test time	≤ 10 minutes			
t ≤ 40°	20 < I ≤ 40	Equal to or greater than the test time	≤ 30 minutes			
	I ≤ 20	Not required	Continuous output possible			

*2: About ohmmeter's response time

A resistance value is instantaneously obtained, calculated using the measured voltage and current values. The response time of the ohmmeter complies with the response times of the voltmeter and ammeter.

- $\boldsymbol{*}3:$ Resistance value-based and sampled voltage value-based judgments cannot be simultaneously conducted.
- *4: Limited by the maximum rated output and the output terminal voltage. The tester can be used within the range shown below. Allowable range in which to determine the test current value and upper reference value

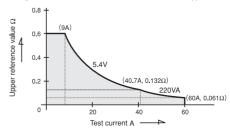

TOS6210

Ground Bond Tester

Time		
Test time	Setting range	0.3 to 999 s Timer ON/OFF function is available.
	Accuracy	$\pm (100 \text{ppm of setting} + 20 \text{ms})$
Environment		
Operating environment		Indoor use, Overvoltage Category II
Warranty range	Temperature	5° to 35°C
	Humidity	20 %rh to 80 %rh (non condensing)
Operating range	Temperature	0° to 40°C
	Humidity	20 %rh to 80 %rh (non condensing)
Storage range	Temperature	-20° to 70°C
	Humidity	90 %rh or less (non condensing)
Altitude		Up to 2000m
Power requiremen	t	
Allowable voltage	range	85 to 250 V AC
Power consumption	At no load (READY)	60 VA or less
	At rated load	420 VA max.
Allowable frequency range		47 Hz to 63 Hz
Insulation resistan	ce	$30M\Omega$ min. (500 V DC), between AC line and chassis
Hipot		1390 V AC (2 seconds), between AC line and chassis
Ground bond		25 A AC/0.1 Ω max.
Electromagnetic co	ompatibility (EMC) (*5,	6)

Electromagnetic compatibility (EMC) (*5,6)

Conforms to the requirements of the following directive and standard.

EMC Directive 2004/108/EC

EN61326

EN61000-3-2

EN61000-3-3

Under following conditions

- 1. Used test leadwire (TL12-TOS) which is supplied.
- 2. Used the shielded cable which length is less than three meters when the SIGNAL I/O is used.

Safety (*5)

Conforms to the requirements of the following directive and standard.

Low Voltage Directive 2006/95/EC

EN61010-1


Class I

Pollution degree 2

Pollution degree 2		
Physical dimensions (max)	430(455)W × 88(140)H × 270(350)Dmm	
Weight	Approx. 11kg	
Accessories		
AC power cord	1 piece	
Test leadwire TL12-TOS	1 set	
Short bar	2 pieces (These are inserted between the OUTPUT and SAMPLING terminals.)	
AC power fuse	2 pieces (2, including one spare in the fuse holder)	
Operation manual	1 copy	

^{*5:} Not applicable to custom order models.

—External dimensional diagrams—

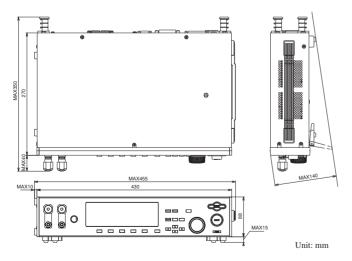

^{*6}: Only on models that have CE marking on the panel.